





3007

LED Slim Down Light Series

S938 A1

Surface Mounting Instruction for LED Slim Down Light

Material Composition:

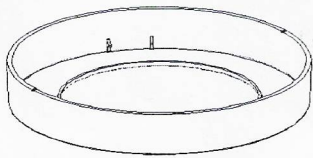

Ceiling frame×1 Ceiling bracket with safety rope×1 connectors ×2 expansion pipe ×2 self-tapping screw ×2

Installation:

Step 1. Turn off the power.

Step 2. Remove the two springs from the lamps P0100-C/P0150-C/P0205-C/P0225-C (picture a).

Step 3. Fix the connectors on the place of the springs (picture b).

Step 4. Put the lamp in the ceiling frame, correspond the connector to the bottom of the small gap of the ceiling frame (picture c).

Step 5. Drill the hole on the ceiling to install the expansion pipe (picture e) according to the drill table (picture d).




Step 6. Install the expansion pipe, then lock the self-tapping screw and leave space about 3 to 5mm as per picture f.

Step 7. Harness keyhole on self-tapping screw, connect the commercial power wire with the terminal block of the ceiling bracket, lock the self-tapping screw (picture g).

Step 8. Connect the power line with terminal block of the ceiling bracket, Clasp the safety rope to connectors next to the lamp (picture h).






Step 9. correspond the external small gap of the ceiling light housing to the jaw position with triangular symbol in the ceiling frame, snap up vertically and rotate ceiling frame, a cracking sound means the end of installation (picture i).

Step 10. Re-check to make sure everything is well-connected, then turn on the power.

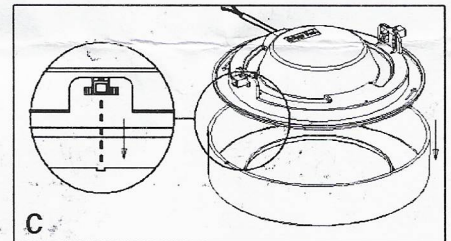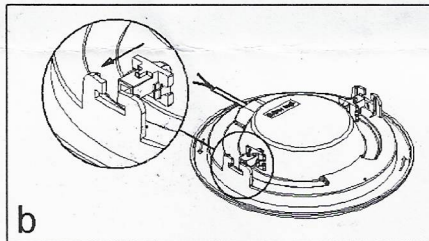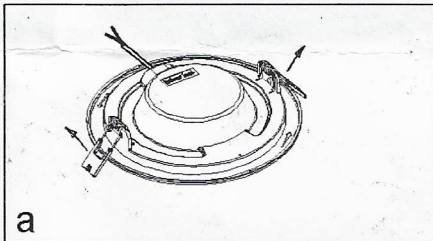

Drill Table

Model	P0100-S	P0150-S	P0205-S	P0225-S
L(mm)	72	120	170	190

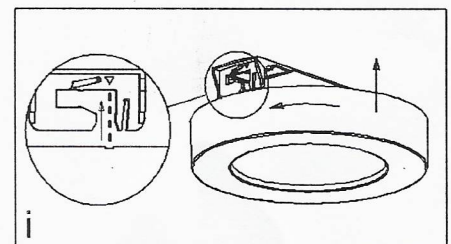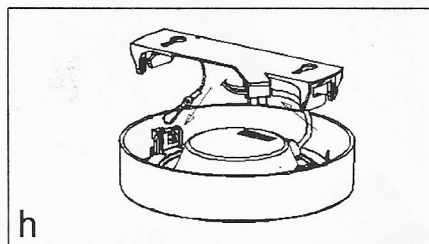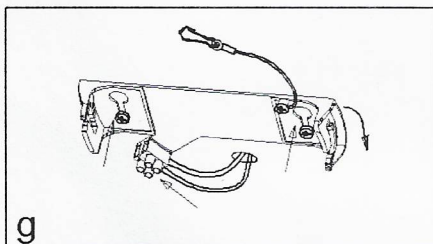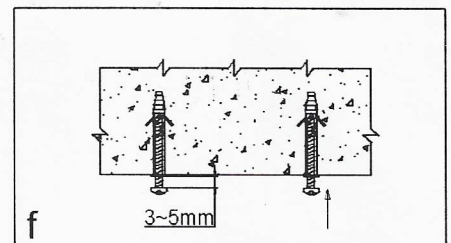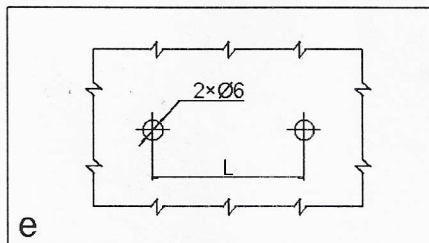

WARNING



- * Power should be cut off before installation, maintenance or inspection.
- * Please install and use the light strictly according to the instruction.
- * Do not disassemble or remold the product at will to avoid accident of electric shock or light falling.